DaughterBorad to MotherBoard CONN

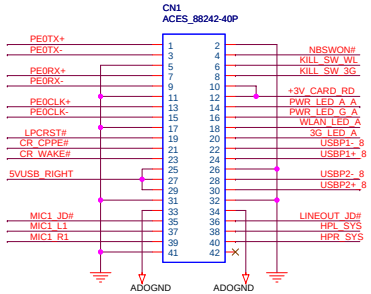

CardReader







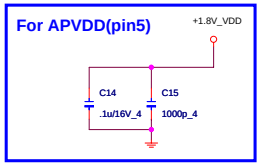

APVDD(pin5) must put C601/1000pF close to APVDD(pin5) (length must under 120mil) and trace width = 20mil, after C601, pls put one more 0.1uF for it.

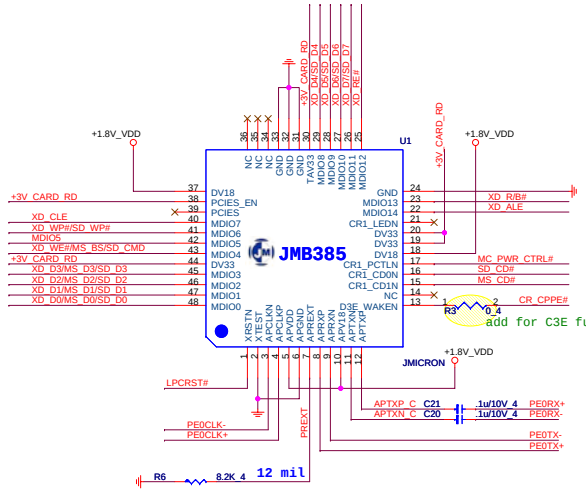

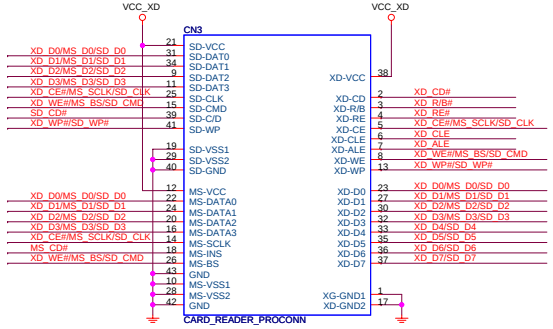

USB CONN

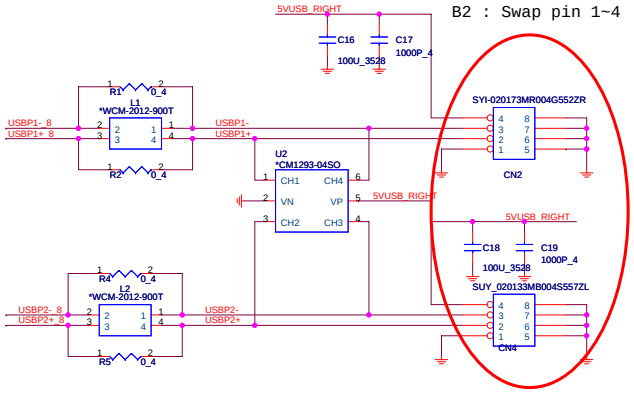

PHONE JACK

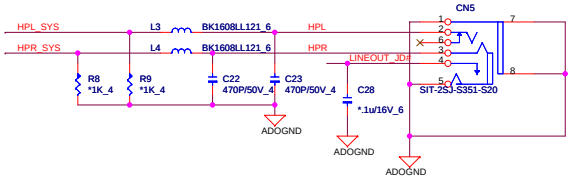

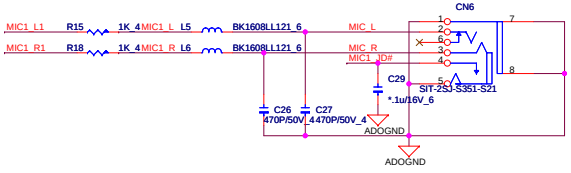

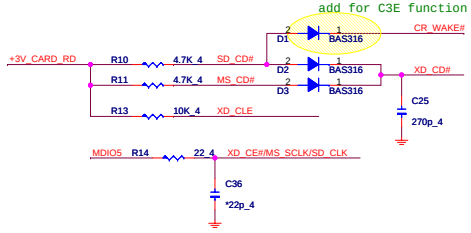

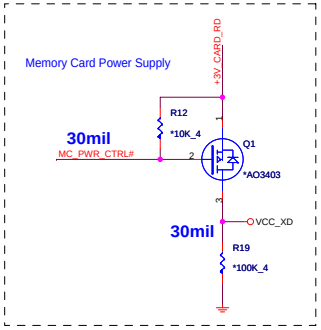

Use 0805 type and over 20 mils trace width on both side

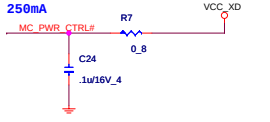

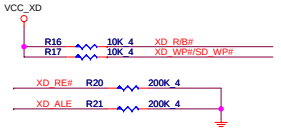

LED

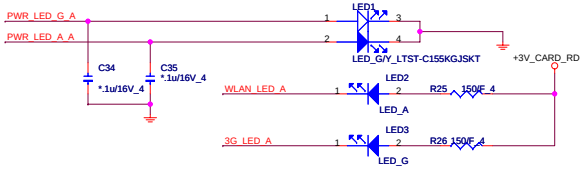

Kill SW

chnge pin sequence

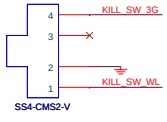

Power SW

add for ESD



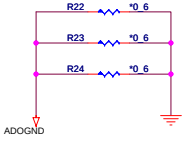

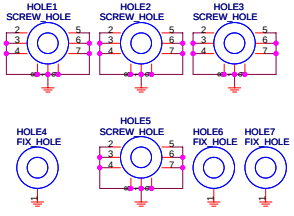

Title	<Title>	
Size C	Document Number <Doc>	Rev <RevCode>
Date: Monday, June 02, 2008	Sheet 1 of 1	